


NOTES:

1. LOCATE ITS TRENCH UNDER SIDEWALK TO AVOID EXISTING & PROPOSED UTILITIES.
2. TRENCH BEFORE INSTALLATION OF NEW SIDEWALK.
3. CONTRACTOR SHALL ADJUST HORIZONTAL TRENCH ALIGNMENT TO AVOID EXISTING UTILITIES AS NECESSARY. VERIFY ALIGNMENT ADJUSTMENTS WITH CITY REPRESENTATIVE.
4. FOR ITS CONDUIT TRENCH DETAIL, SEE STD DWG ITS-4 AND ITS-5.
5. DIRECTIONAL BORE OR REMOVE & REPLACE SIDEWALK (BETWEEN EXISTING JOINT) & TRENCH.
6. INSTALLATION OF ITS CONDUITS UNDER SIDEWALK SHALL ONLY BE ALLOWED WITH WRITTEN PERMISSION FROM THE CITY ENGINEER.

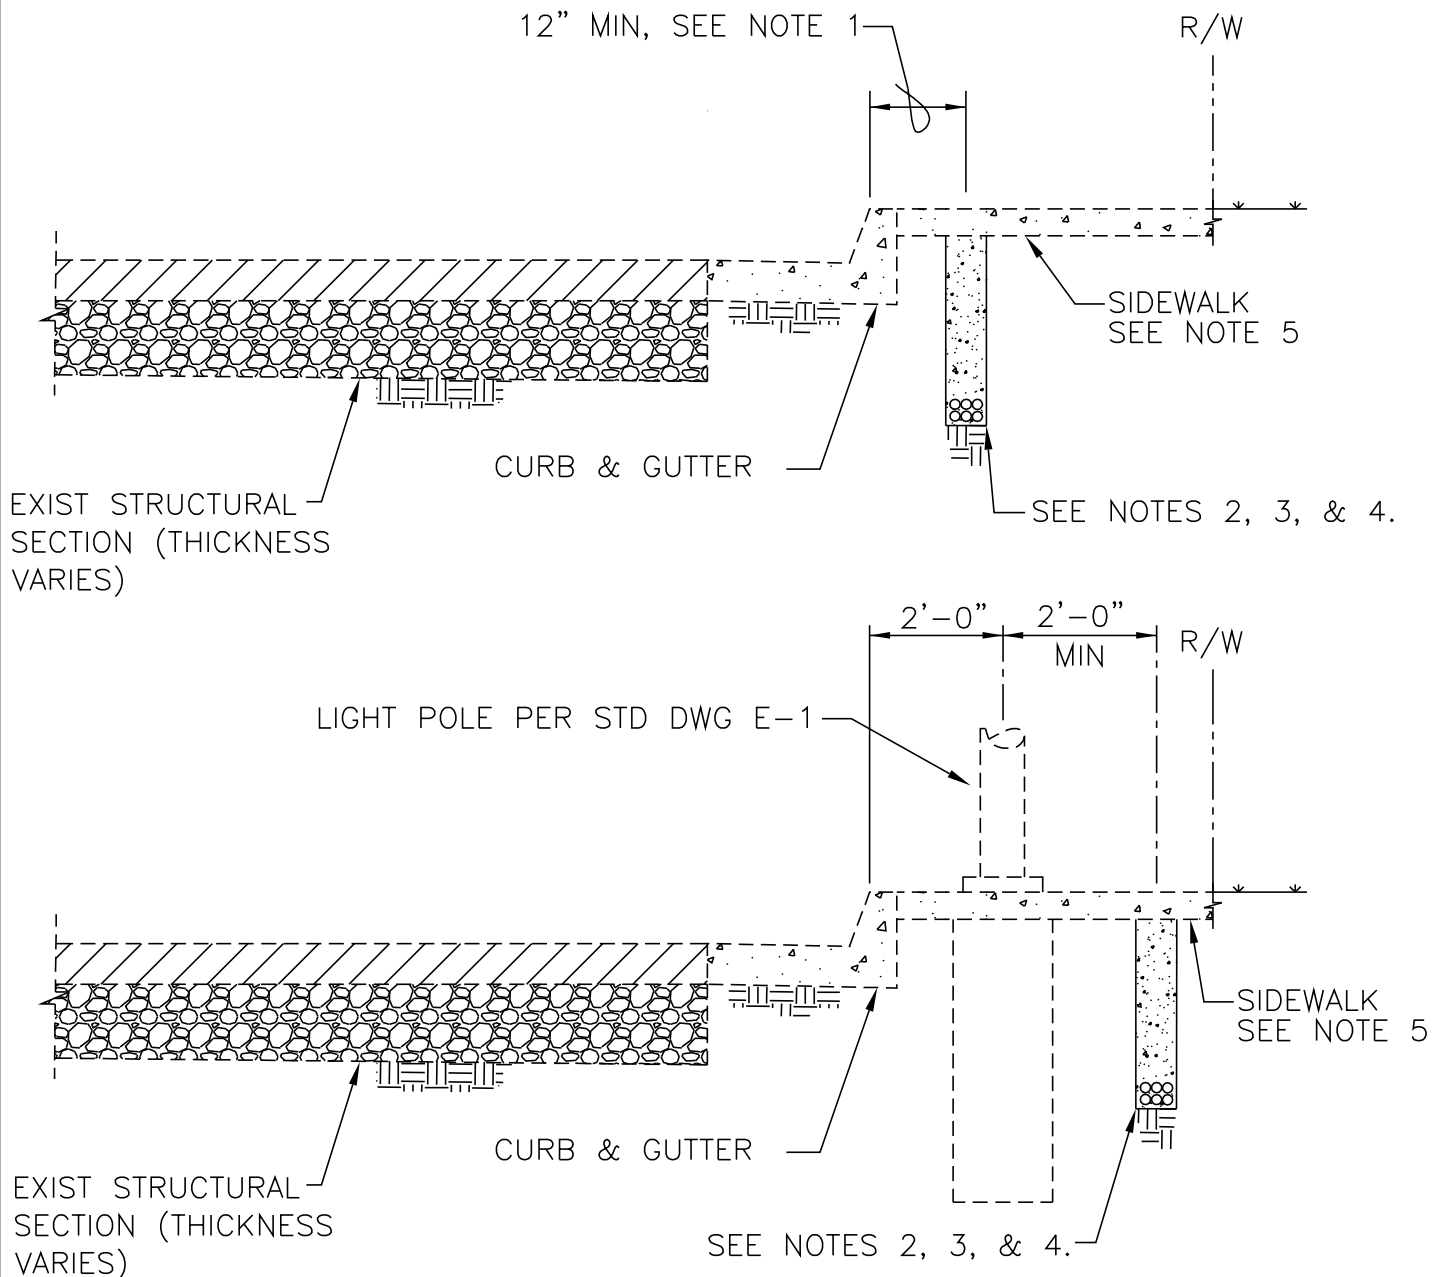

ITS CONDUIT TRENCH LAYOUT NO. 3

REF. & REV.
FEB 08

CITY OF FRESNO
ITS-8